

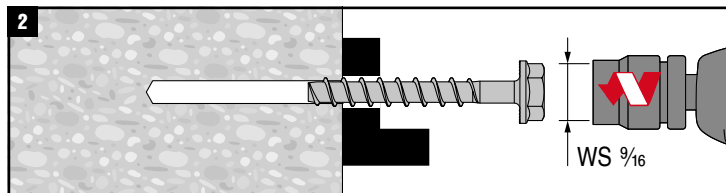


KWIK HUS-EZ	h_1^*	t_{fix}
$\frac{3}{8} \times 1\frac{1}{8}$	$2\frac{1}{8} - t_{fix}$	0... $\frac{1}{4}$
$\frac{3}{8} \times 2\frac{1}{8}$	$2\frac{3}{8} - t_{fix}$	0... $\frac{1}{2}$
$\frac{3}{8} \times 3$	$3\frac{1}{4} - t_{fix}$	0... $\frac{1}{2}$
$\frac{3}{8} \times 3\frac{1}{2}$	$3\frac{3}{4} - t_{fix}$	0...1
$\frac{3}{8} \times 4$	$4\frac{1}{4} - t_{fix}$	0... $\frac{3}{4}$
$\frac{3}{8} \times 5$	$5\frac{1}{4} - t_{fix}$	0...1 $\frac{3}{4}$

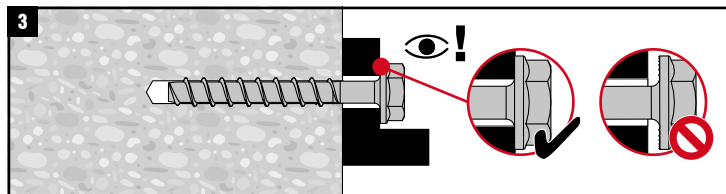

2.1	$H_{nom} < 2\frac{1}{8}$	$H_{nom} \geq 2\frac{1}{8}$	
SID 4 22-A/18-A	✓	✓	✓
SIW 22-A/18-A	✗	✓	✓
	19 ft-lb	40 ft-lb	22 ft-lb

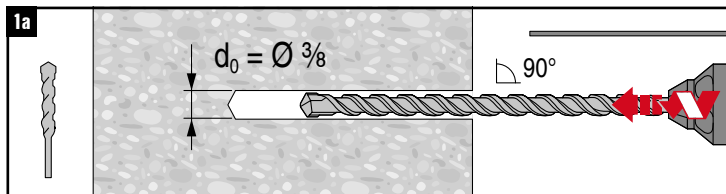

*For non-hole cleaning installation (steps 1a or 1b), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.