

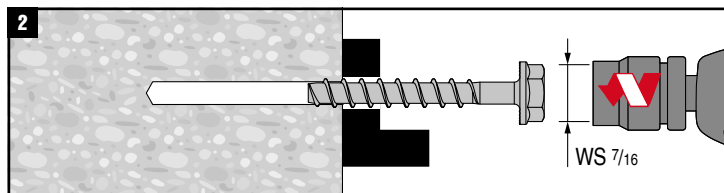
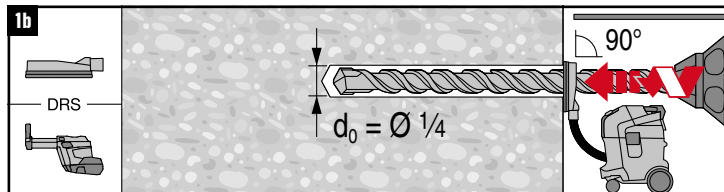


KWIK HUS-EZ	h_1^*	t_{fix}
$1/4 \times 1 7/8$	$2 1/4 - t_{\text{fix}}$	$0 \dots 1/4$
$1/4 \times 2 5/8$	$3 - t_{\text{fix}}$	$0 \dots 1/8$
$1/4 \times 3$	$3 3/8 - t_{\text{fix}}$	$0 \dots 1/2$
$1/4 \times 3 1/2$	$3 7/8 - t_{\text{fix}}$	$0 \dots 1$
$1/4 \times 4$	$4 3/8 - t_{\text{fix}}$	$0 \dots 1 1/2$

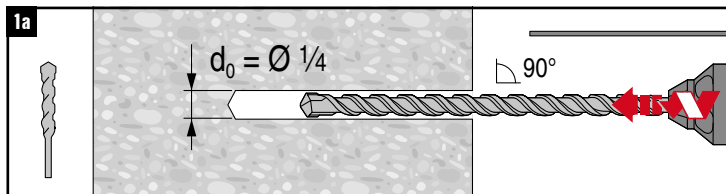

2.1		
 SID 4 22-A/18-A	✓	✓
 SIW 22/18-A	✓	✓
	18 ft-lb	21 ft-lb

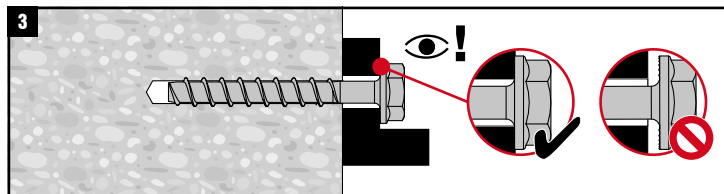

*For non-hole cleaning installation (steps 1a or 1b), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.